



PRIOR TO USE

- ▲ Before using your QuickPitch Tent check that it is complete and free from any defects.
- ▲ We strongly recommend you erect your QuickPitch Tent before going camping to familiarise yourself with the pitching of your QuickPitch Tent.
- ▲ We also recommend you weather the Tent by hosing it thoroughly checking for any seam leakage.
- ▲ Please note and fully understand that no Tent can be totally guaranteed 100% waterproof!

While the material of your Tent is waterproof, certain weather conditions such as high winds and driven rain can sometimes cause slight leakage through the seamed and zipped areas. We recommend that prior to use you apply seam sealant to the outer seams of the flysheet. This will give your Tent added protection from the outside elements. Note, some discolouration may occur when seam sealant is applied.

USING YOUR QUICKPITCH TENT

- ▲ Choose a site that is stone or sharp object free.
- ▲ Avoid pitching near trees.
- ▲ Fully read the fire precaution label attached to the carrying case of your QuickPitch Tent.
- ▲ In high humidity, condensation can form on the inner side of your Tent. Do not confuse this with leaking. We recommend that as many ventilation points, including partial opening of doors and windows are left open, subject to weather conditions wherever possible.

AFTER USE CARE

- ▲ Prior to packing, always clean off mud and grass.
- ▲ If possible pack your QuickPitch Tent when it is dry.
- ▲ Do not store your QuickPitch Tent wet as mildew can form on the inside and rust can form on steel pegs and poles, always dry and clean these items prior to storage.
- ▲ Store in dry, ventilated conditions.


SECURITY

- ▲ Gelert Ltd., SpotWiki, Inc., or any reseller cannot be held responsible for loss or damage to personal belongings or equipment as a result of theft or adverse weather conditions.
- ▲ Any measurements shown are approximate.


Fig 1

How to pop open the tent

- ① Remove elastic strap and throw away.

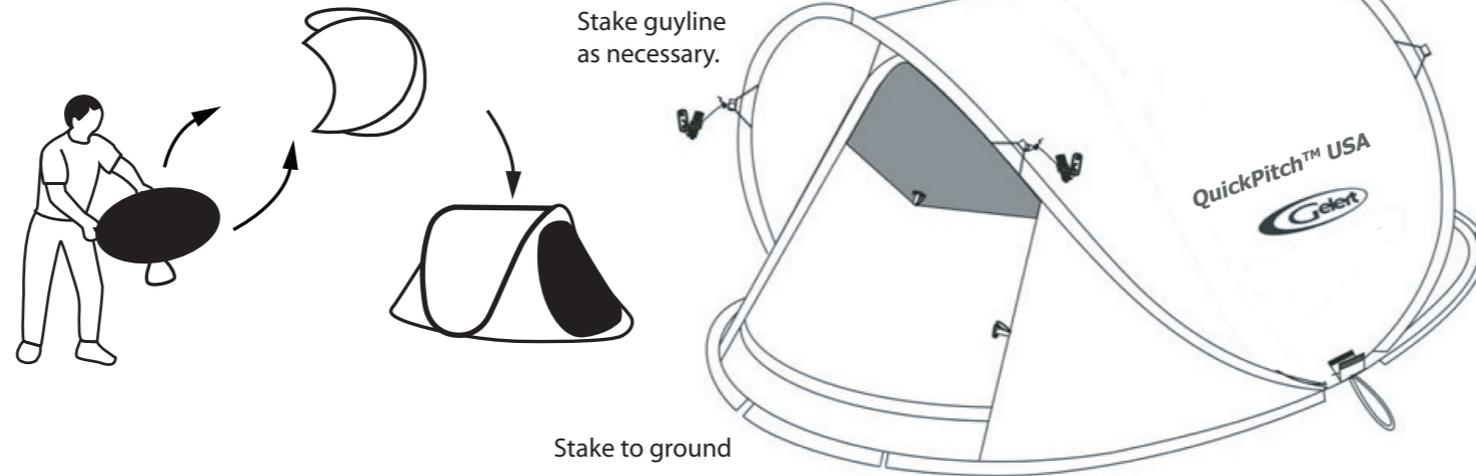


② Packing Instructions

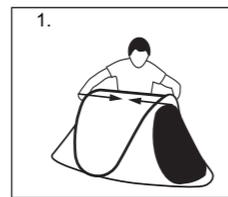


1. Pull the two top pole hoops together in the center of the tent ensure the door is open to release excess air




2. Holding the two top pole hoops together bring the rear pole hoop up to the centre. allow all excess air to be pushed out.

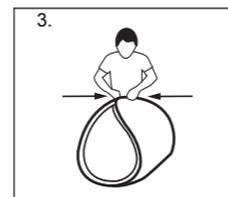


3. Bring the front pole hoops up to the centre. All 2 pole hoops should now be held together.

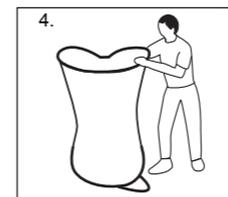


4. Still holding the poles together stand the tent up on one end. Ensure that the end with the elasticated strap is at the bottom (on the floor).

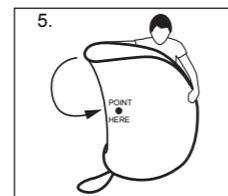

5. Hold the four pole hoops together with one hand. Take hold of the furthest point of the top loop with your other hand. Bring the top point down in an arc to the floor then tuck the front point into the rest of the tent. Apply gentle pressure to hold in place. Divide the four poles, get two in each hand. Lay the poles in one hand flat onto the loop on the floor

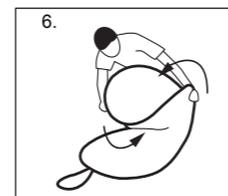

6. The second loop can then be folded over the previous loop. This should create four hoops on top of each other.

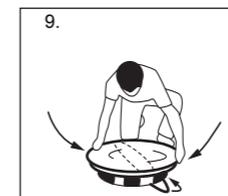

7. Use the elasticated strap to secure all of the hoops together in a circle. The tent can now be put back into the bag.

General Advice:

Be cautious when removing the QuickPitch Tent from its bag and remove the elastic strap - the tent is spring loaded and forms immediately in front of you!

Children should pitch tent under adult supervision.

It is recommended that you open and re-pack the tent before using it for the first time so you become familiar with the packing process.

PITCHING (See Diagrams)

- ▲ Open carry case and remove tent.
- ▲ Find a clear space, hold the tent securely and remove strap. Release and toss the tent away from the body allowing room for it to pop open. (Fig 1)
- ▲ Stake the tent using all stake points and guylines.

PACKING

- ▲ See details. (Fig 2) and follow steps.
- ▲ Ensure that the elastic strap is securely in place before packing into the carry case.
- ▲ ③ See the video at www.spotbrands.com

SAFETY

- ▲ While in use always ensure that both the front and rear vents are open to allow for adequate air flow.
- ▲ This tent complies with the requirements of CPAI-84.

PLEASE NOTE

IT IS RECOMMENDED THAT A HAMMER BE USED TO STAKE OUT YOUR TENT AND THAT IT IS FULLY GUYED AT ALL TIMES FOR STABILITY IN WINDY CONDITIONS.

QuickPitch is a trademark of SpotWiki, Inc. and is marketed in the U.S. and Canada by SpotBrands.com.

WARNING: Do NOT use stoves, heaters or lanterns that use combustable fuel (gas- propane-meths) inside your tent. Do NOT use any open flames, under any circumstances.